




# Remote 232 External Modem

## RS 232/External Modem Wiring

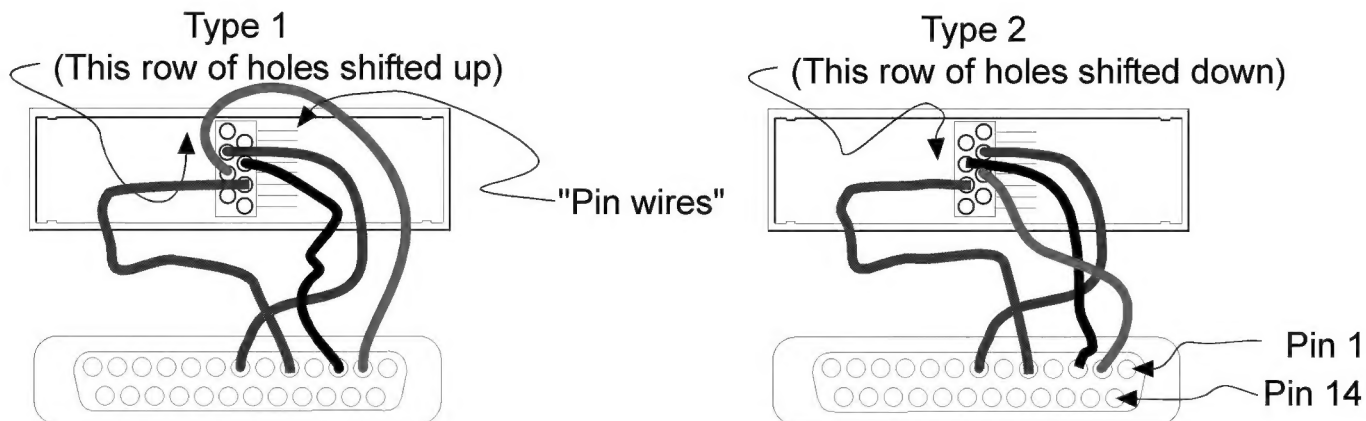

NOTE: Use a standard cable between adapter and the Acroprint Data Collection Terminal RS 232 port.

